

FOR THE WINSTED DEALER NEAREST YOU Call 1.800.447.2257 Or Fax 1.800.421.3839







**TEL:** 800.447.2257 • 952.944.9050

FAX: 800.421.3839 • 952.944.1546

**EMAIL:** info@winsted.com

**WEB:** winsted.com









## **WINSTED - LOCATIONS**

## WINSTED CUSTOM DIVISION WINSTED WORLD HEADQUARTERS

1750 Breckinridge Pkwy, Suite 100 10901 Hampshire Avenue South Duluth, GA 30096-7576 USA Minneapolis, MN 55438-2385 USA

> TEL: 800.237.5606 • 770.840.0880 FAX: 770.840.9685

**EMAIL:** custom@winsted.com **WEB:** winstedcustom.com

## WINSTED EUROPE • MIDDLE EAST


Unit D1 Sapphire Court Isidore Rd, Bromsgrove Enterprise Park Bromsgrove B60 3FL - UK

TEL: 44 (0) 1527 833714 **EMAIL:** info@winsted.co.uk **WEB:** winsted.com


## PARAMOUNT<sup>™</sup>


90082/90084/90086 1-BAY/2-BAY /3-BAY




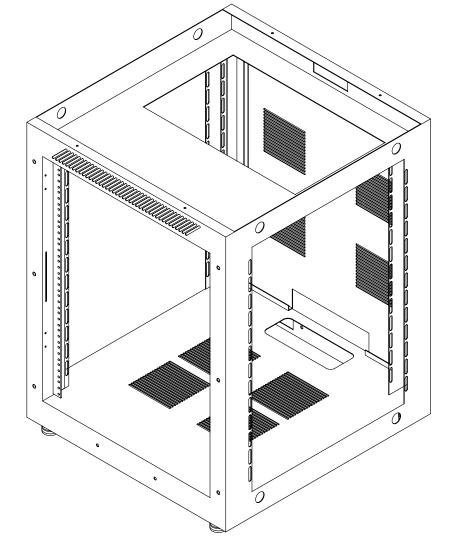





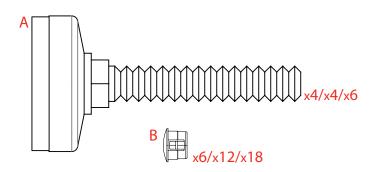


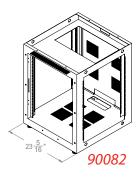


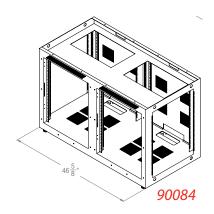


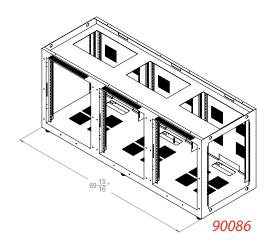


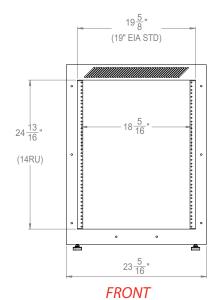

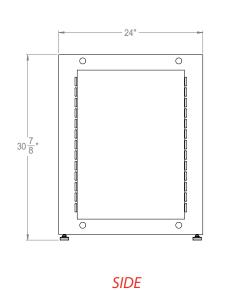

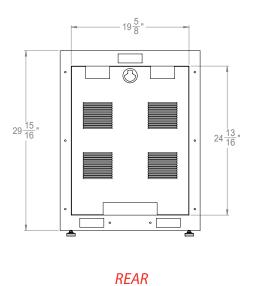

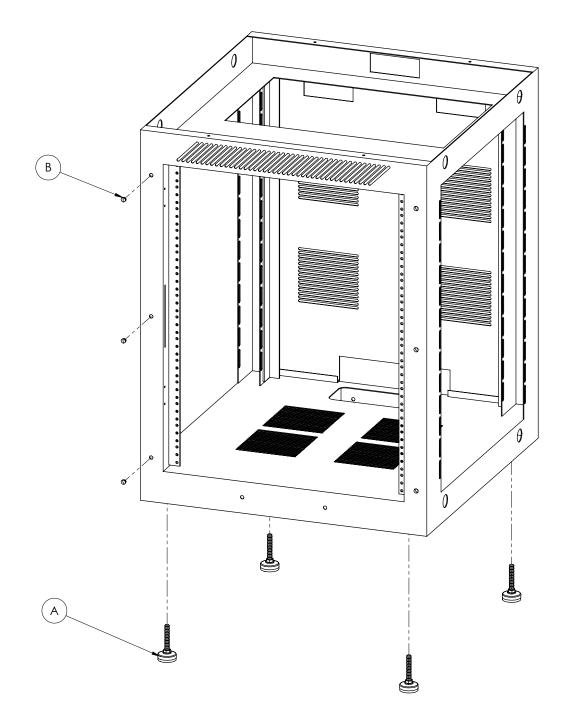

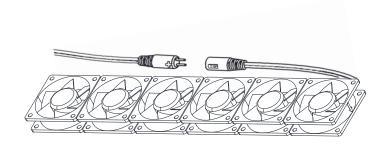

To deploy the cooling system simply connect the included power supply to the fan assembly. Ensure to align 'Tip' to '+' on the connector ends.

Determine the desired setting for the fan speed by adjusting the voltage on the power supply. Set the voltage as high as possible for the most airflow.

Blow or vacuum dust from the fan assemblies as necessary.