



Strata Dual Dynamic Arms - W9232

Assembly Instructions

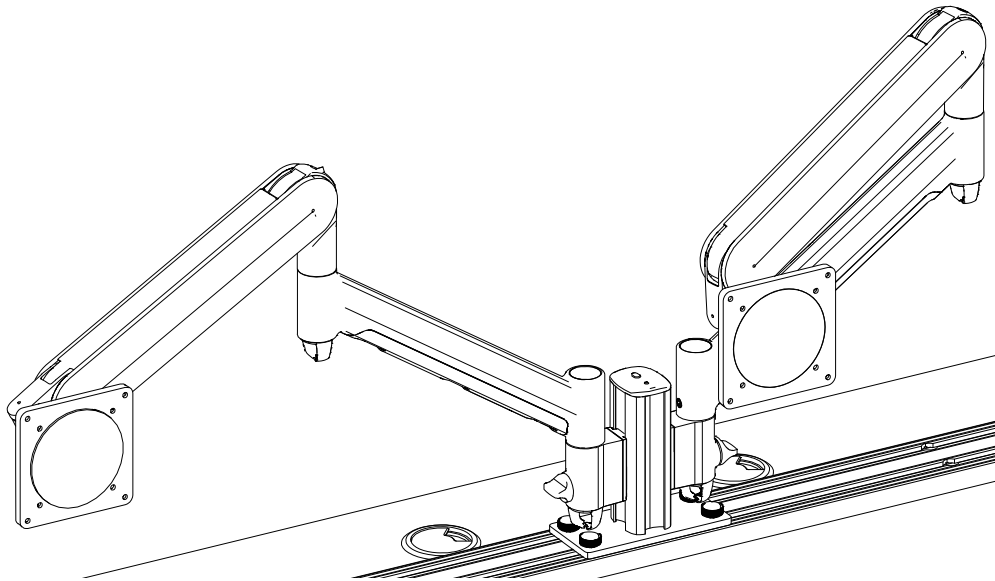

COMPONENT CHECKLIST

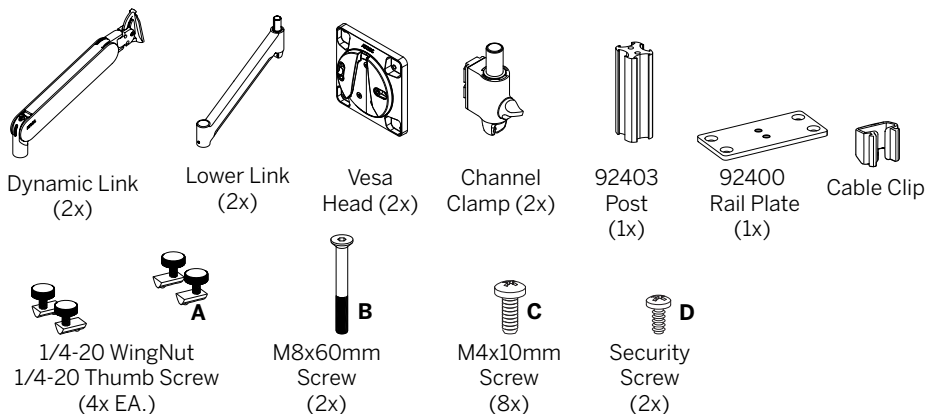

W9232 CONTAINS

- 1x 92403
- 2x 92430
- 1x 92400

REQUIRED TOOLS

- Phillips Head Screwdriver
- 4mm Hex Key

IMPORTANT INFORMATION

- Please ensure this product is installed as per these installation instructions.
- Do not remove/ throw away the black plastic sleeve on the channel clamp or arm links.
- The manufacturer accepts no responsibility for incorrect installation.
- This product is not suitable for outdoor use or mobile applications.
- Do not over-tighten screws and adjustment points on product.
- VESA mounted accessories (such as mini PC brackets and mounts), offset VESA locations, and unevenly weighted monitors (relative to the center of the VESA mounting interface) exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.


WEIGHT RANGE*

Flat display	2-8kg (17.6lbs)
Curved display	2-8kg (17.6lbs)


Strata Dual Dynamic Arms - W9232

Assembly Instructions


STEP 1 - ATTACH POST TO RAIL PLATE

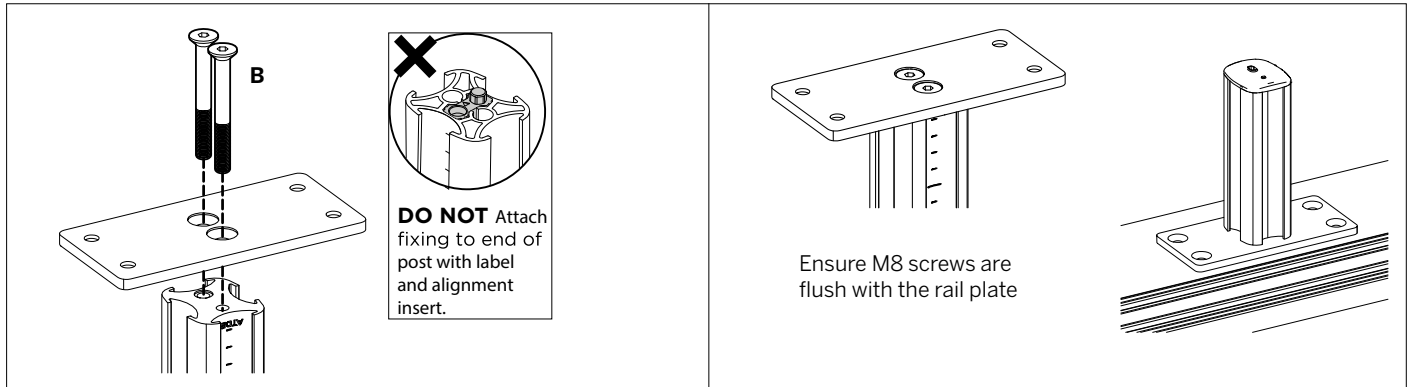

STEP 2 - ATTACH POST TO VERSA TRACK

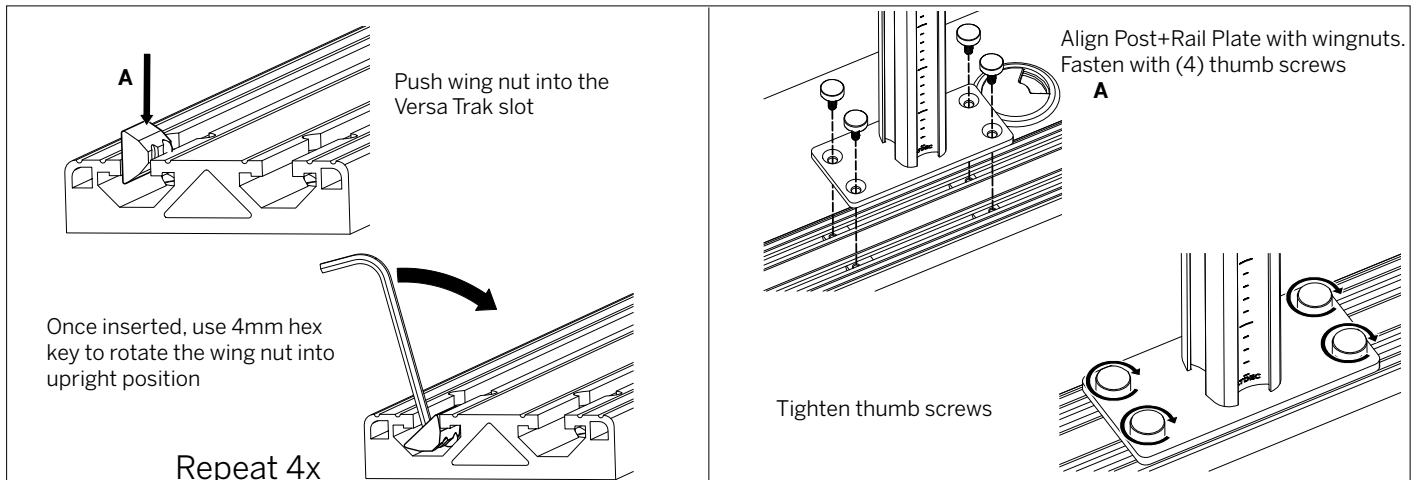




STEP 3 - FIX CHANNEL CLAMPS TO POST

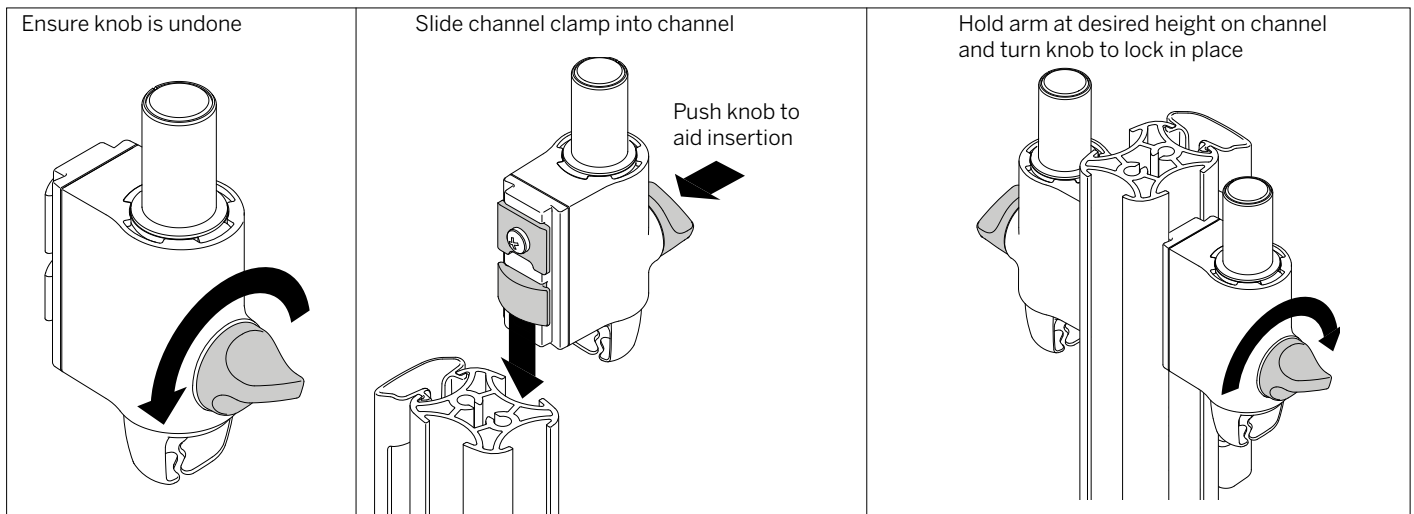




Strata Dual Dynamic Arms - W9232

Assembly Instructions




STEP 4 (OPTIONAL) - SET ARM ROTATION TO 180°

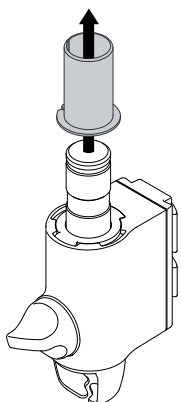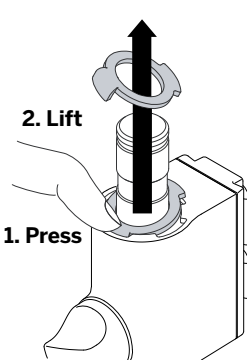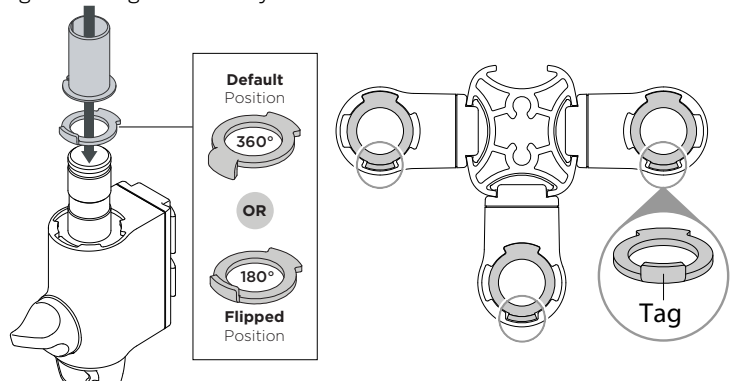Remove plastic sleeve from channel clamp. 	Remove rotation ring 2. Lift 1. Press 	Place rotation ring in desired position and return plastic sleeve NOTE: Rotation ring placement depends on the position of the clamp on the post. The tag on the ring should always face towards the user.  Default Position: 360° OR 180° Flipped Position
--	--	--

STEP 5 - ASSEMBLE ARM LINKS

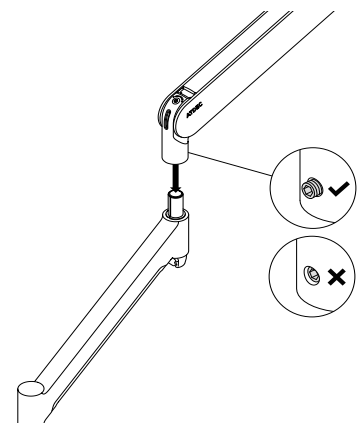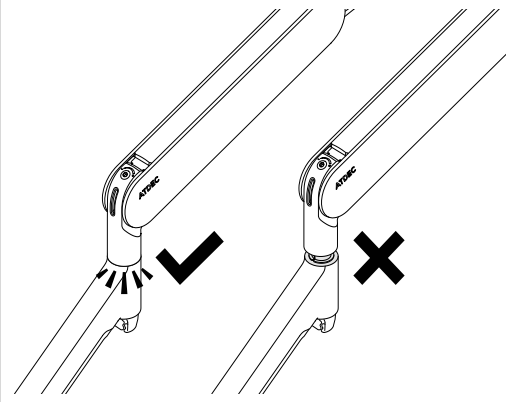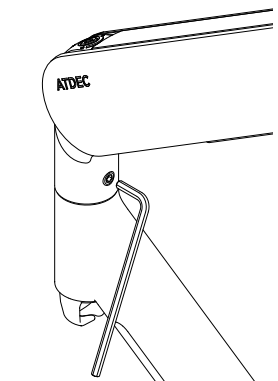Push two arm links together. Do not remove the plastic sleeves 	Ensure links are fully pushed together. 	Tighten set screw with 4mm hex key.  NOTE: Check that arm rotation is smooth after tightening
--	---	---

STEP 6 - FIT ARMS ONTO CHANNEL CLAMPS

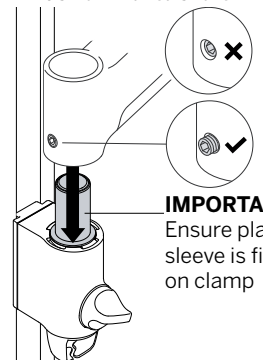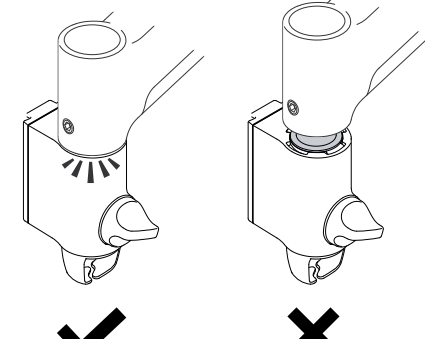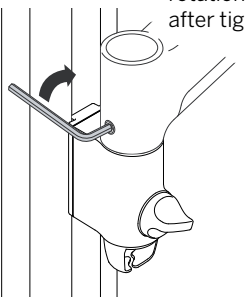Push arm onto shaft  IMPORTANT Ensure plastic sleeve is fitted on clamp	Ensure arm is fully pushed onto shaft 	Tighten joint screw Note: Check the arm rotation is smooth after tightening 
---	---	--


Strata Dual Dynamic Arms - W9232

Assembly Instructions


STEP 7 - ATTACH VESA HEADS TO MONITORS

Check VESA mounting compatibility of monitor


Note: For other sizes, use a suitable adaptor plate (sold separately)

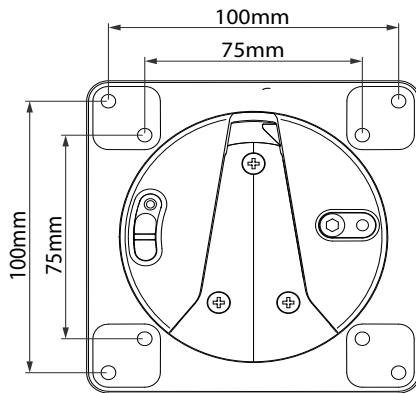


Note: Recessed 75x75 VESA interfaces will require a Spacer Kit (sold separately)

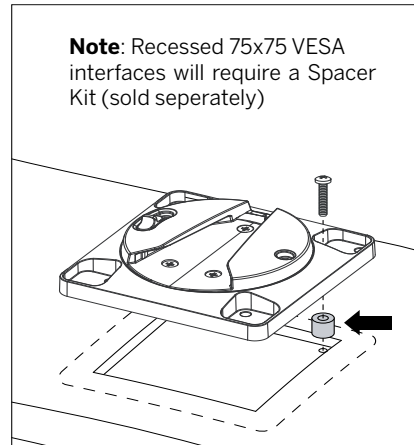

Attach VESA head onto monitor with provided screws. (Alternatively, use fasteners specified by the monitor manufacturer)


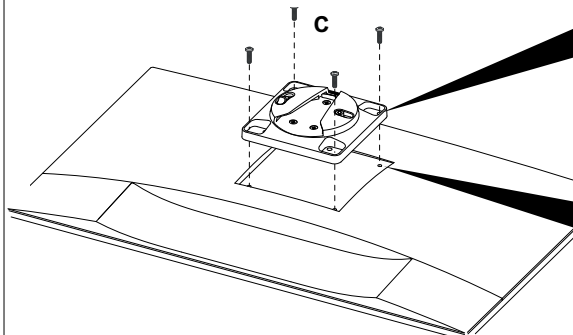


TIP
To allow monitor to be rotated upside down, mount VESA head in the alternate orientation shown.

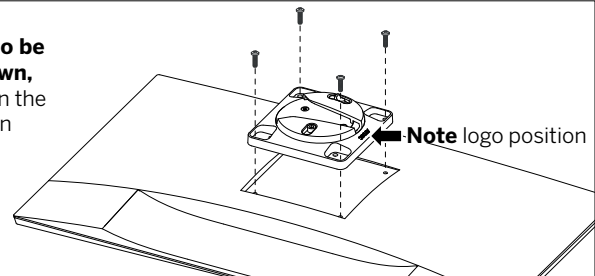


Note: Ensure screw length suits the monitor VESA mounting holes

 VESA Screw
VESA Plate
Monitor

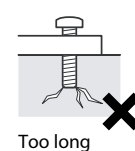

STEP 8 - ATTACH MONITORS TO ARMS


Fit monitor onto arm.

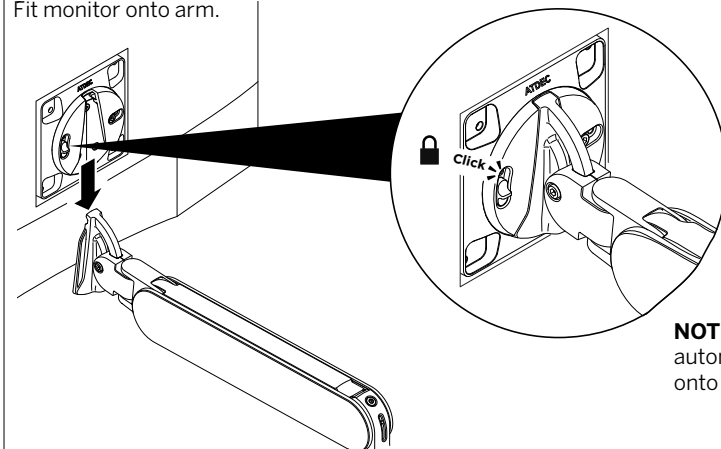

NOTE: VESA head will automatically latch onto the tilt link

OPTIONAL SECURITY SCREW

If desired, once monitor is attached to the arm, install the security screw which disables the release switch.

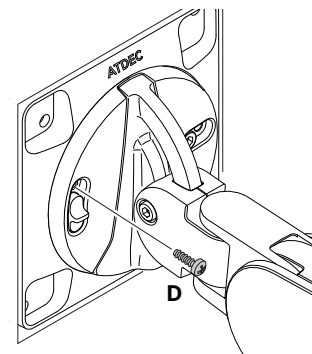

Strata Dual Dynamic Arms - W9232

Assembly Instructions

STEP 9 - FINE TUNE ADJUSTMENT

Factory set tilt tension will be suitable for most monitors.

If required, adjust the tilt tension using the 4mm hex key

DROOPS FORWARD

HOLDS POSITION

Tune the rotation tension using 4mm hex key.

Adjustment may only be required for ultrawide monitors.

DRIFTS

HOLDS POSITION

STEP 10 - ADJUST COUNTERBALANCE TENSION

Using the 4mm hex key, adjust the counterbalance to suit the monitor weight

TIP: For best results, adjust counterbalance with the arm and monitor in the position shown. Adjustment is easiest when the monitor is in the highest position

DROOPS

BOUNCES UP

HOLDS POSITION

Increase tension

Reduce tension

COUNTER-BALANCE ADJUSTMENT SCREW

COUNTER-BALANCE ADJUSTMENT GAUGE

MIN — Lighter Monitors

MAX — Heavier Monitors



TIP: When installing multiple arms with the same monitor, use the setting on the counterbalance adjustment gauge to quickly 'pre-set' other arms (fine-tuning may be required after pre-setting)

Strata Dual Dynamic Arms - W9232


Assembly Instructions

STEP 11 - MONITOR CABLE MANAGEMENT


Plug cables into the monitor and route the cables down the arm using the cable clips

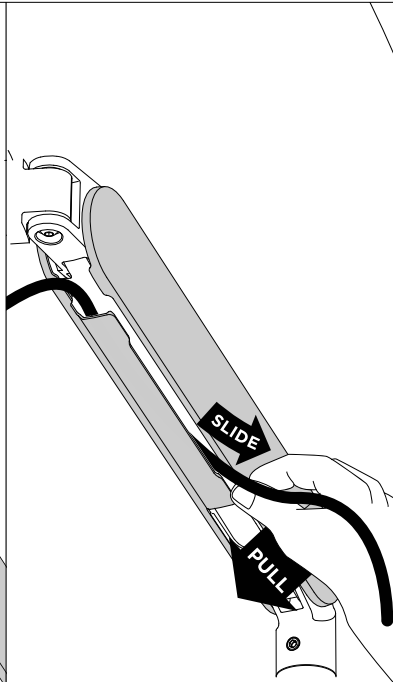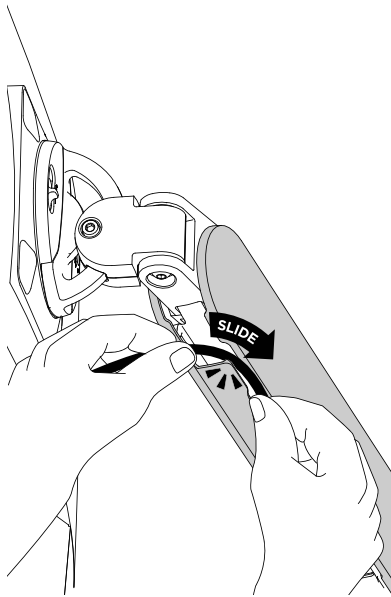

TIP: Ensure enough cable slack is given to allow for movement of the monitor

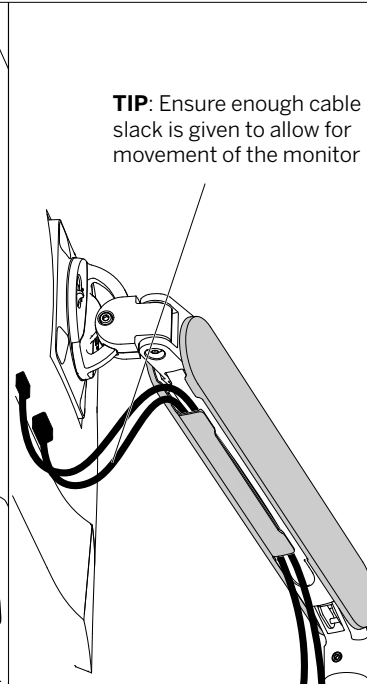

Plug cables into lower arm hook flaps

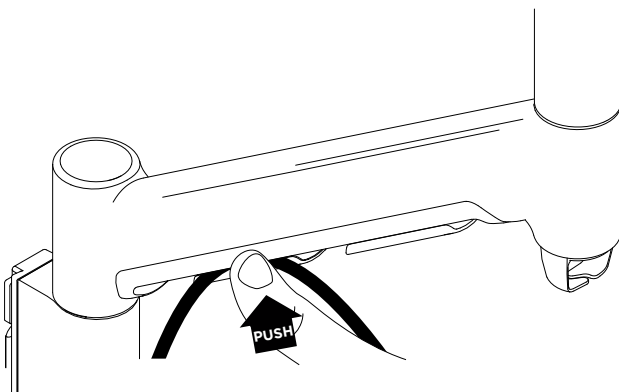

Slide the remaining loose cable from the central gap up the arm.

