


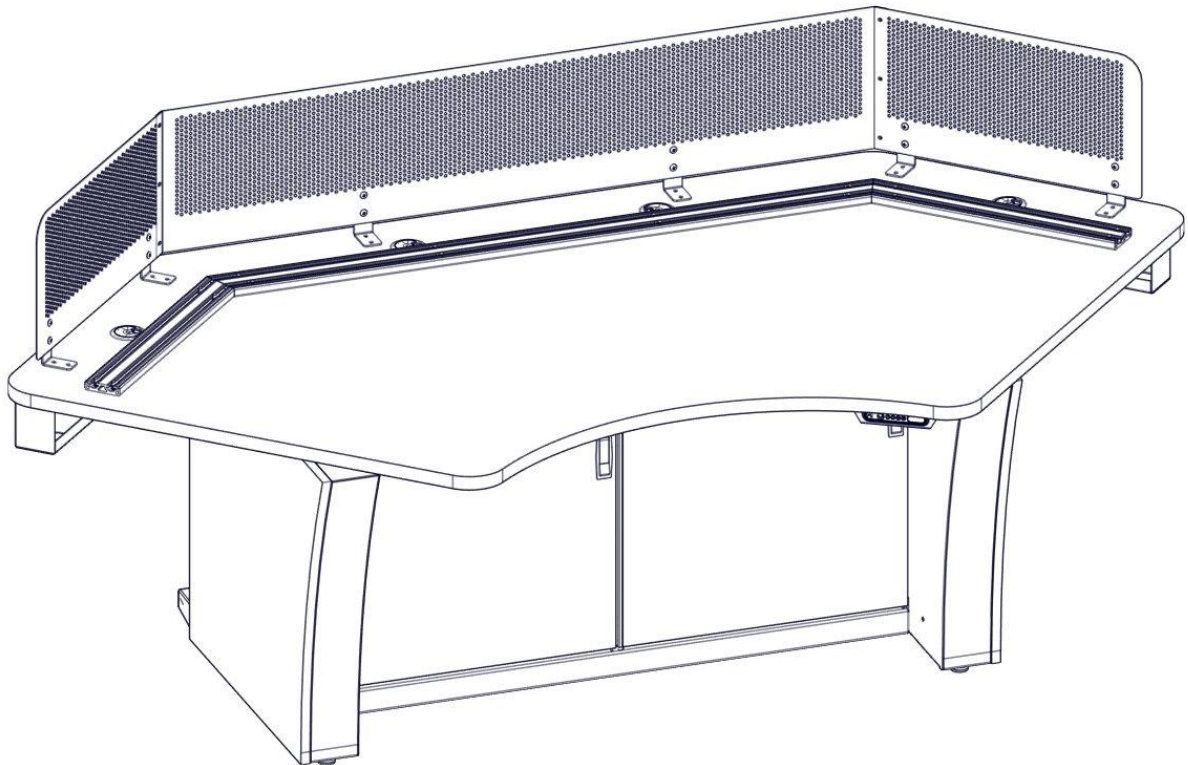

VUE-C 99" 36550, 36570





Assembly Instructions

HARDWARE



M6 x 1.0mm x 16mmL



M6 x 1.0mm x 10mmL



10-32 TORX FLAT HEAD



1/4-20 x 0.5



10-32 x 0.5



8-32 x 0.5



#10 x 0.625
WOOD SCREW



#8 x 0.625
WOOD SCREW



10-32 x 1.75



#10 x 1.75
WOOD SCREW



1/4-20 SNAP FASTENER



1/4-20 KEPS NUT



10-32 KEPS NUT

TOOLS



Screwdriver/Drill



2 Phillips




3 Phillips



T-20

Parts




36006



75000



36002



32201



36003



36071



36016



36070



57709 / 32708



36018 / 36026




36064

36062

36062



36034



36052

36051

36052

