


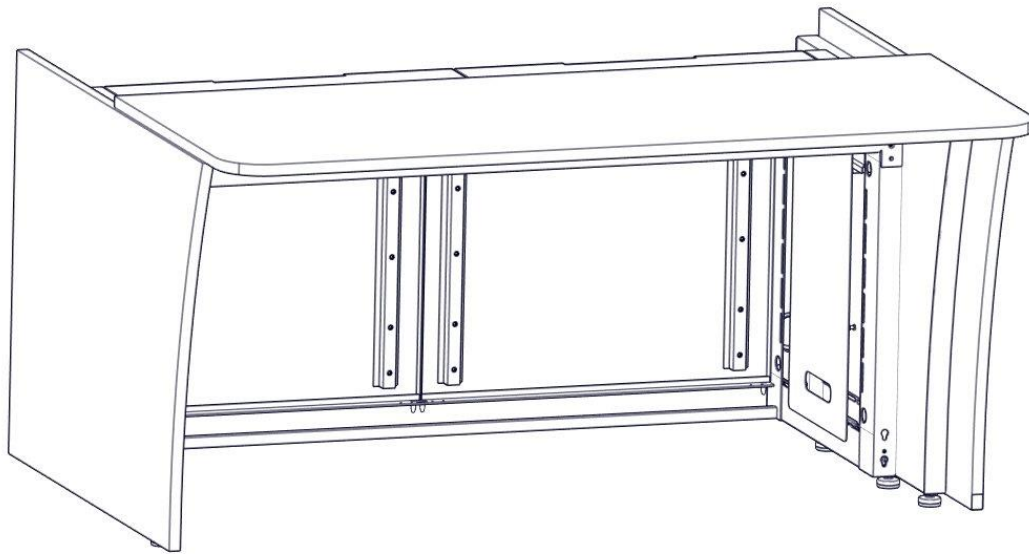

59000 Sightline Open Base



HARDWARE



1/4-20 x 1.375



#10 x 0.625 Wood Screw



10-32 x 0.5




SH 5-16 MOUNTING SCREW



SH 10-24 MOUNTING SCREW



1/4-20 x 0.5



10-32 x 0.5




PUSH IN RIVET



10-32 KEPS NUT



1/4-20 KEPS NUT



MOUNTING GROMMET

TOOLS



T-25 TORX



#2 Phillips




#3 Phillips



Rubber Mallet

PARTS

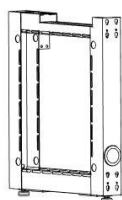

59066




59044



59241




56204



59047




59053




59050



59019

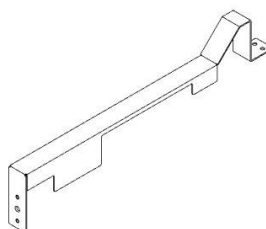



59008

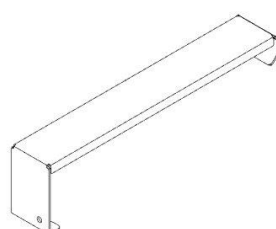

59143







Assembly Instructions

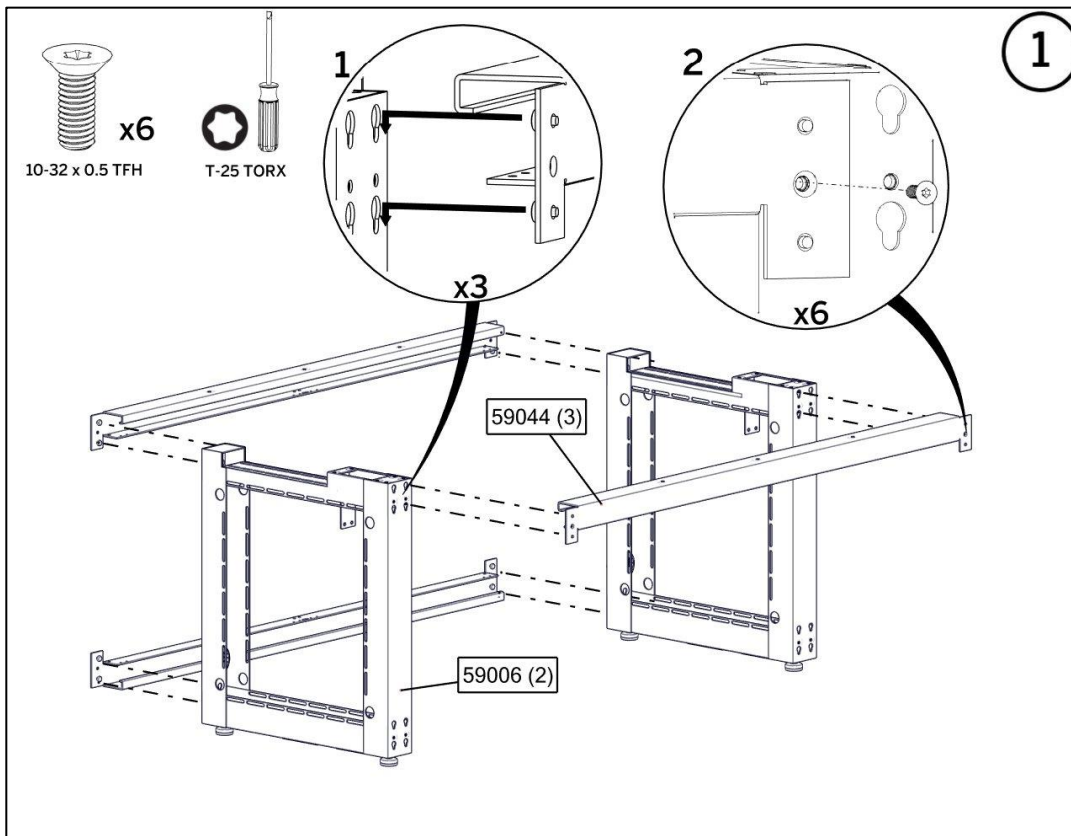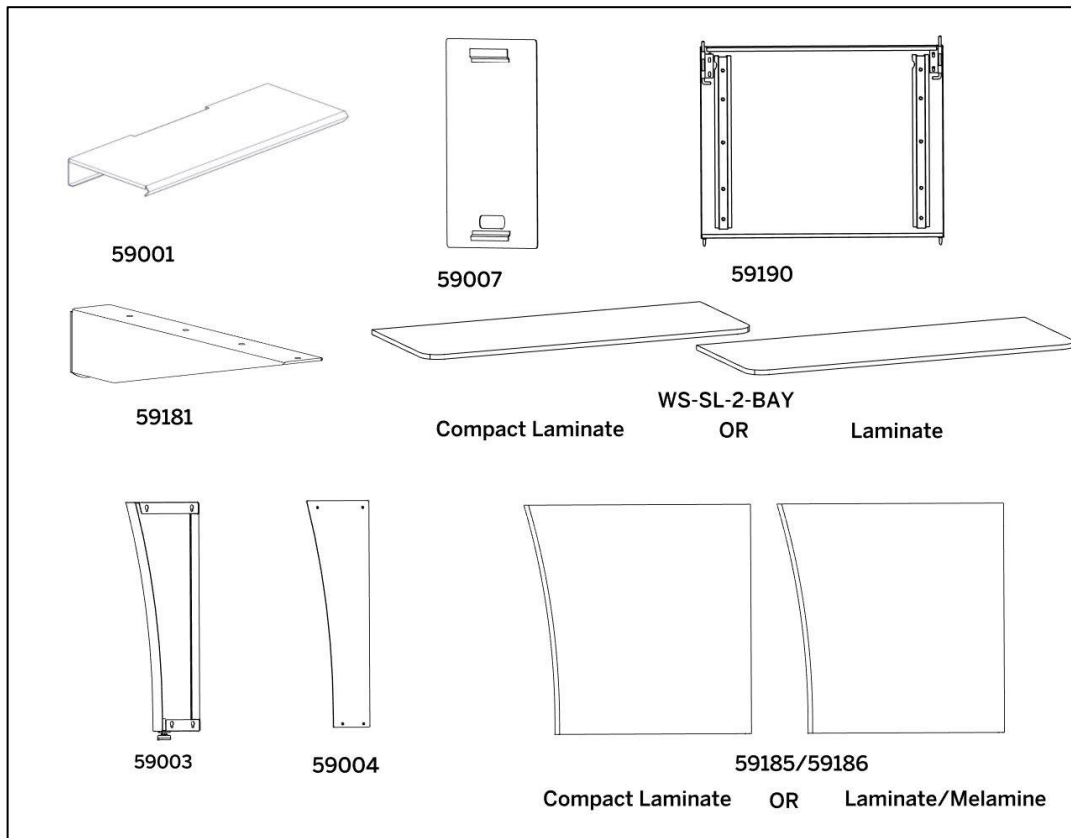





Assembly Instructions

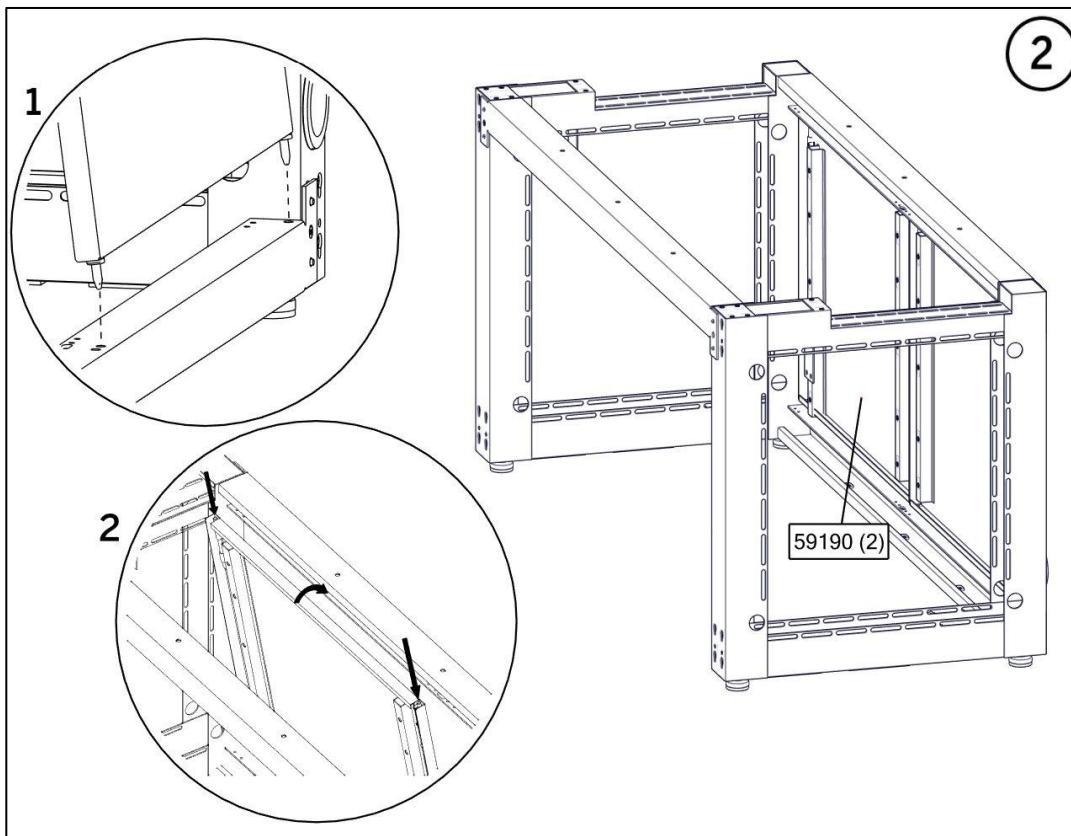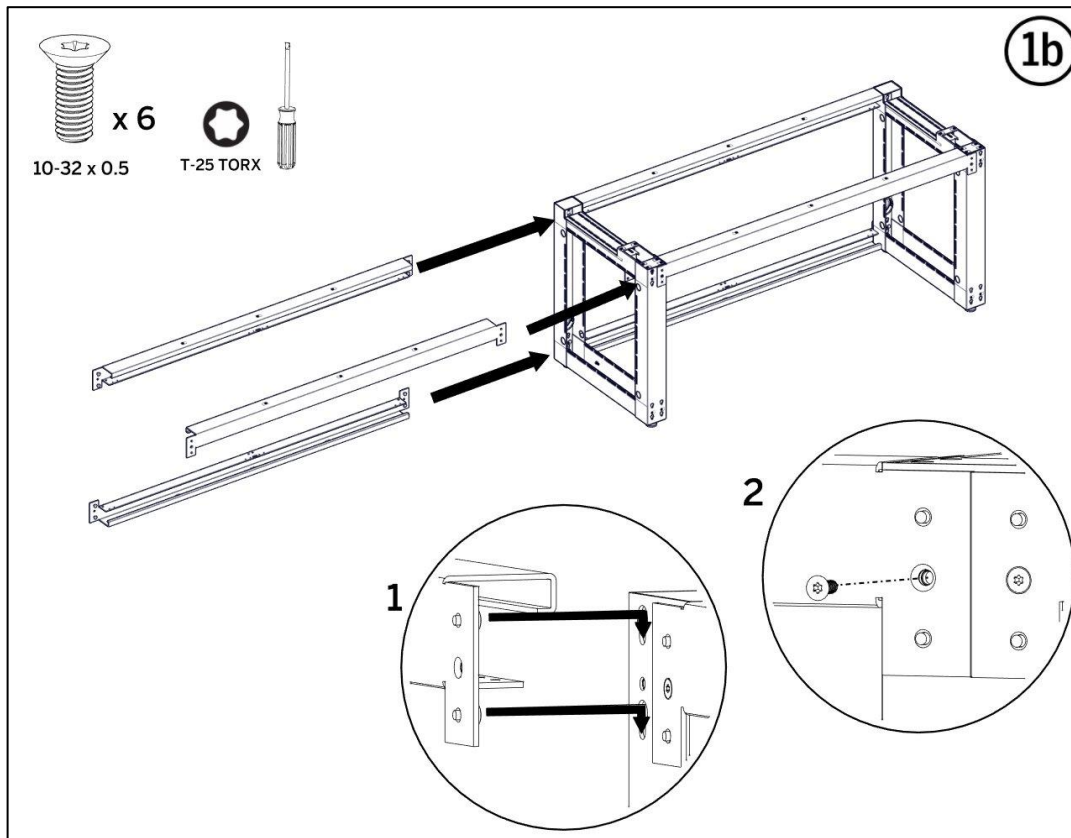

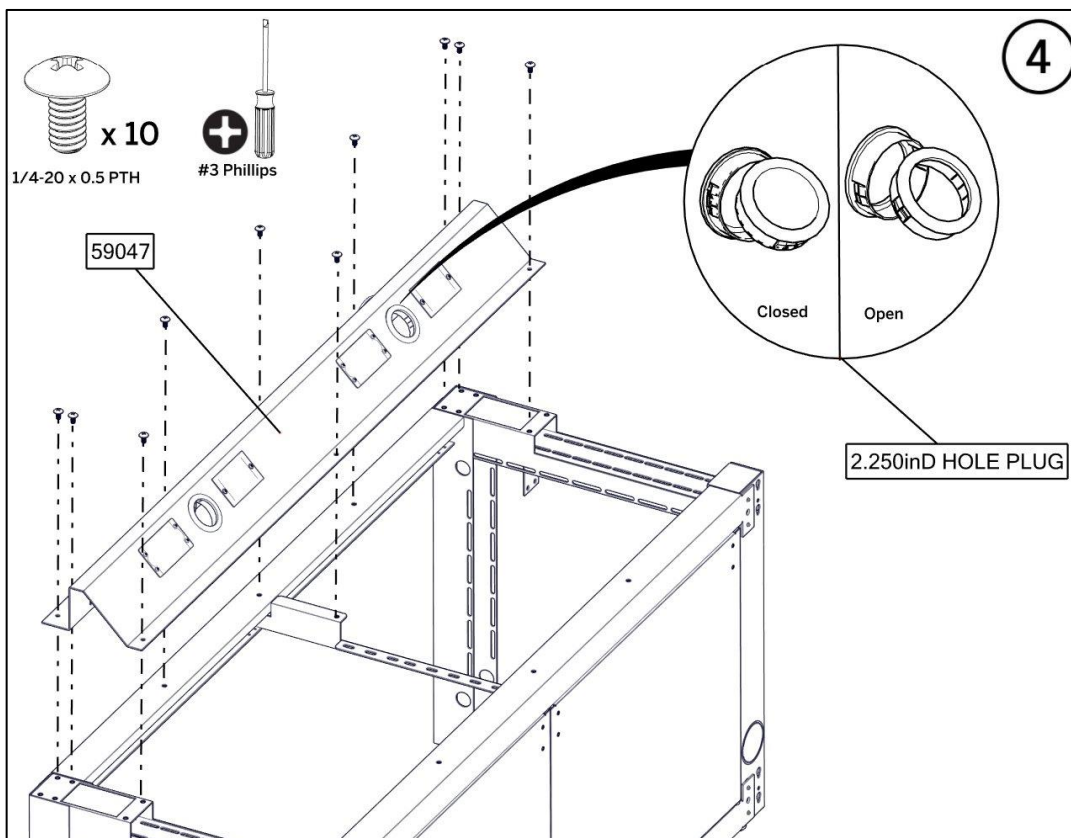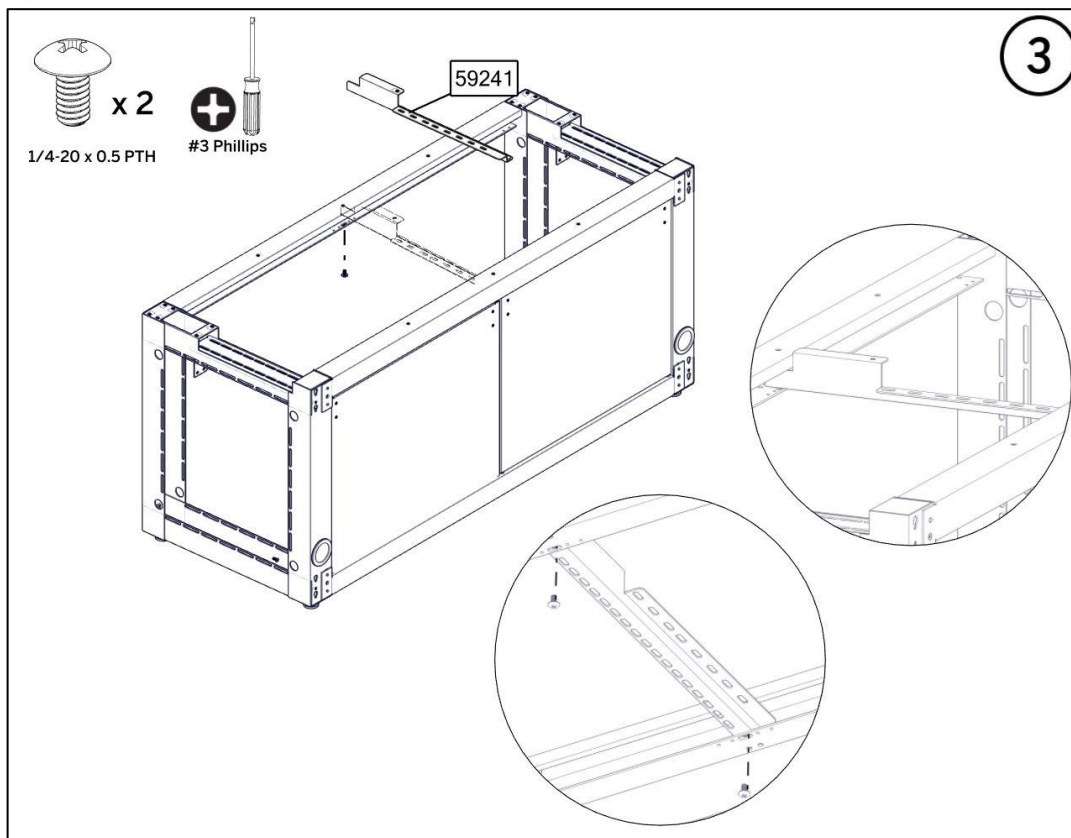



Assembly Instructions

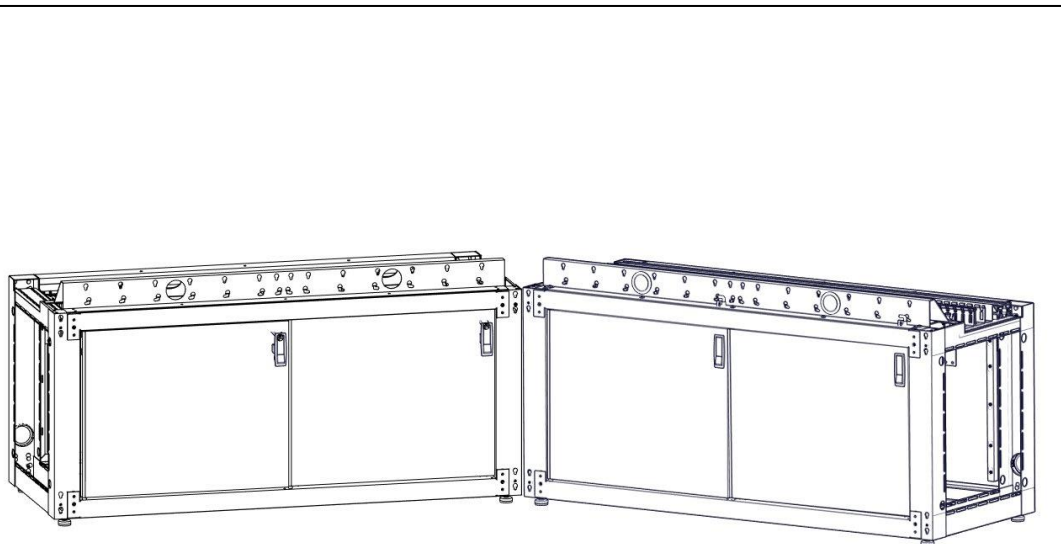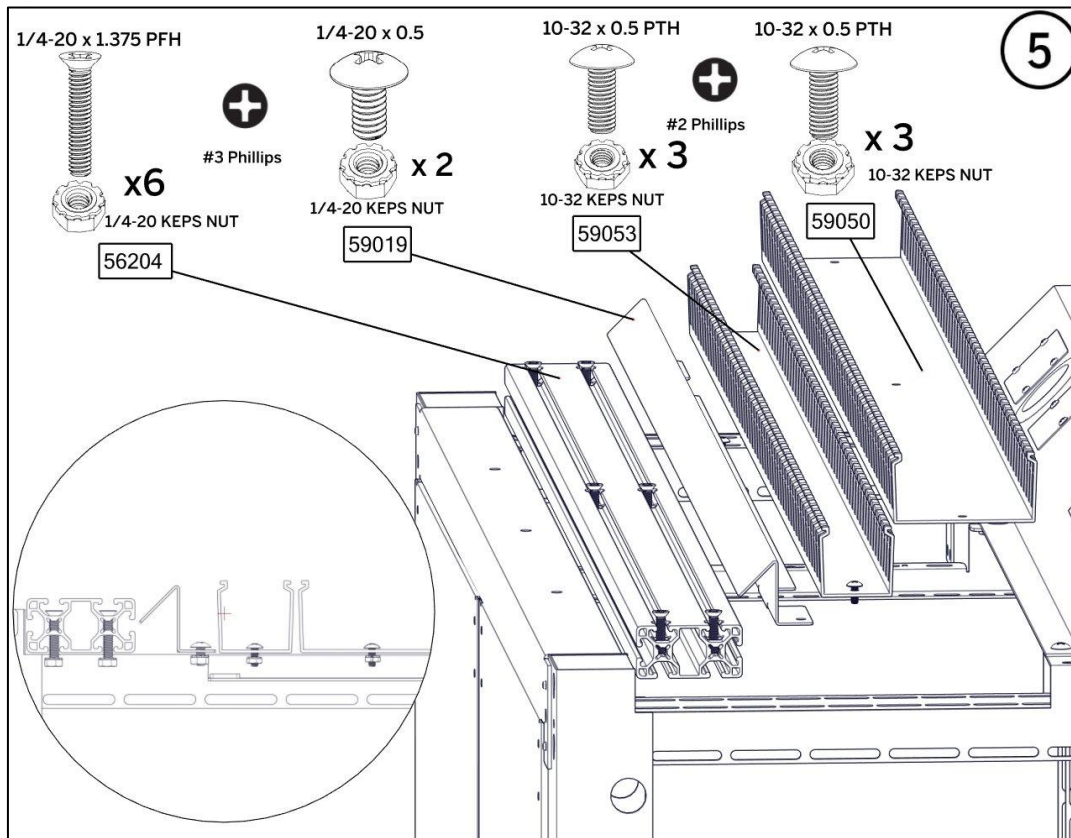

***If additional consoles will be added, repeat steps 1 through 7 until all consoles are attached and ready for step 8.**



Assembly Instructions

