


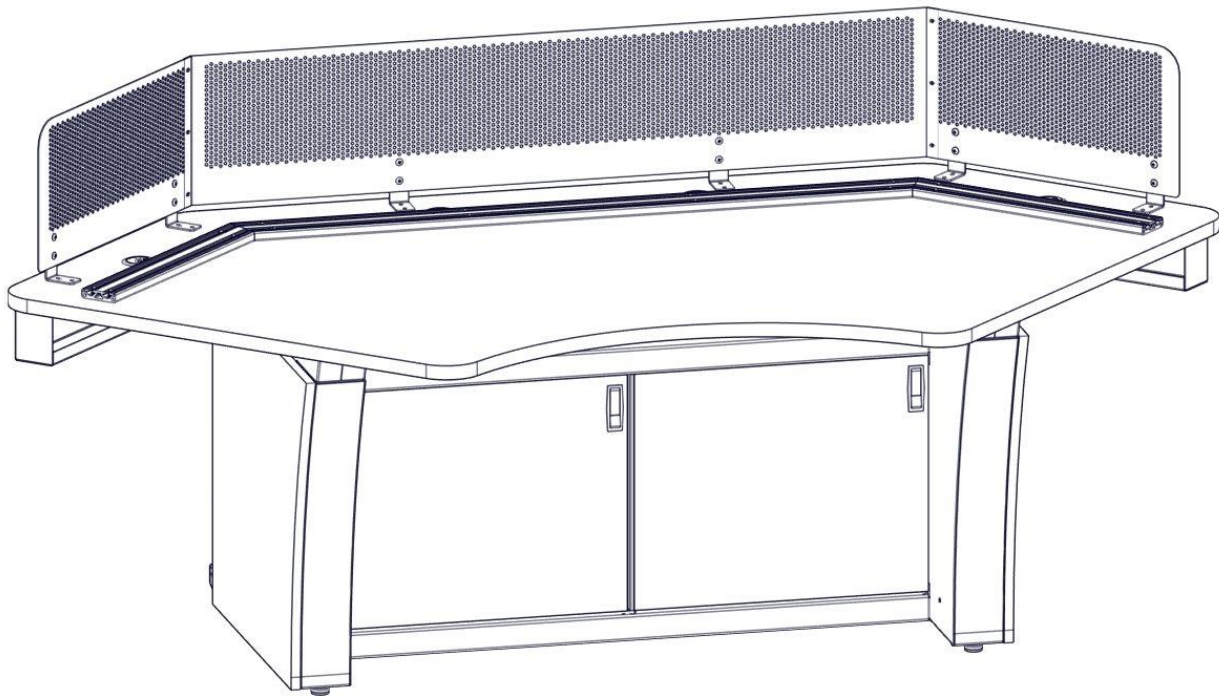

VUE-C 99" 36560





Assembly Instructions

HARDWARE



10-32 TORX FLAT HEAD



1/4-20 x 0.5



10-32 x 0.5



8-32 x 0.5



#10 x 0.625
WOOD SCREW



1/4-20 SNAP FASTENER



1/4-20 KEPS NUT



10-32 KEPS NUT

TOOLS



Screwdriver/Drill



+

2 Phillips



+


3 Phillips



+

T-20

Parts



36006



32201



36023



36024



36031



36032



36071



36016



36070



36021



59009




36064

36062


36062



36034

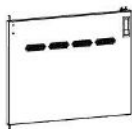

59056



36052

36051

36052

