


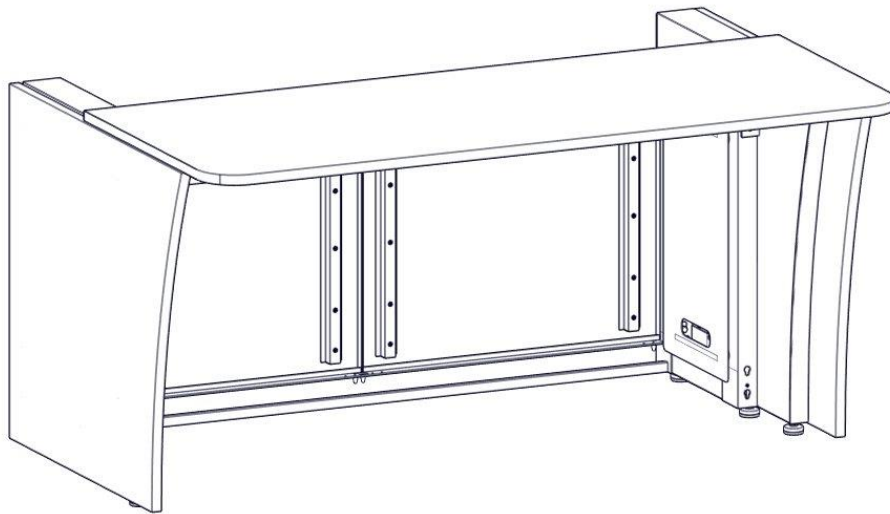

59000 SIGHTLINE-HD OPEN BASE



HARDWARE



1/4-20 x 1.375



#10 x 0.625 Wood Screw



10-32 x 0.5



SH 5-16 MOUNTING SCREW



SH 10-24 MOUNTING SCREW



1/4-20 x 0.5



10-32 x 0.5



PUSH IN RIVET



10-32 KEPS NUT



1/4-20 KEPS NUT



MOUNTING GROMMET

TOOLS



T-25 TORX




#2 Phillips



Rubber Mallet

PARTS



59097




59044



59109




56204




59047




59053

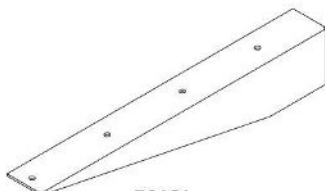



59181


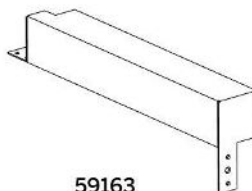




59163


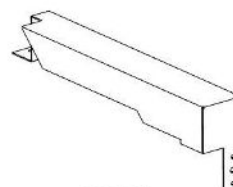


59164

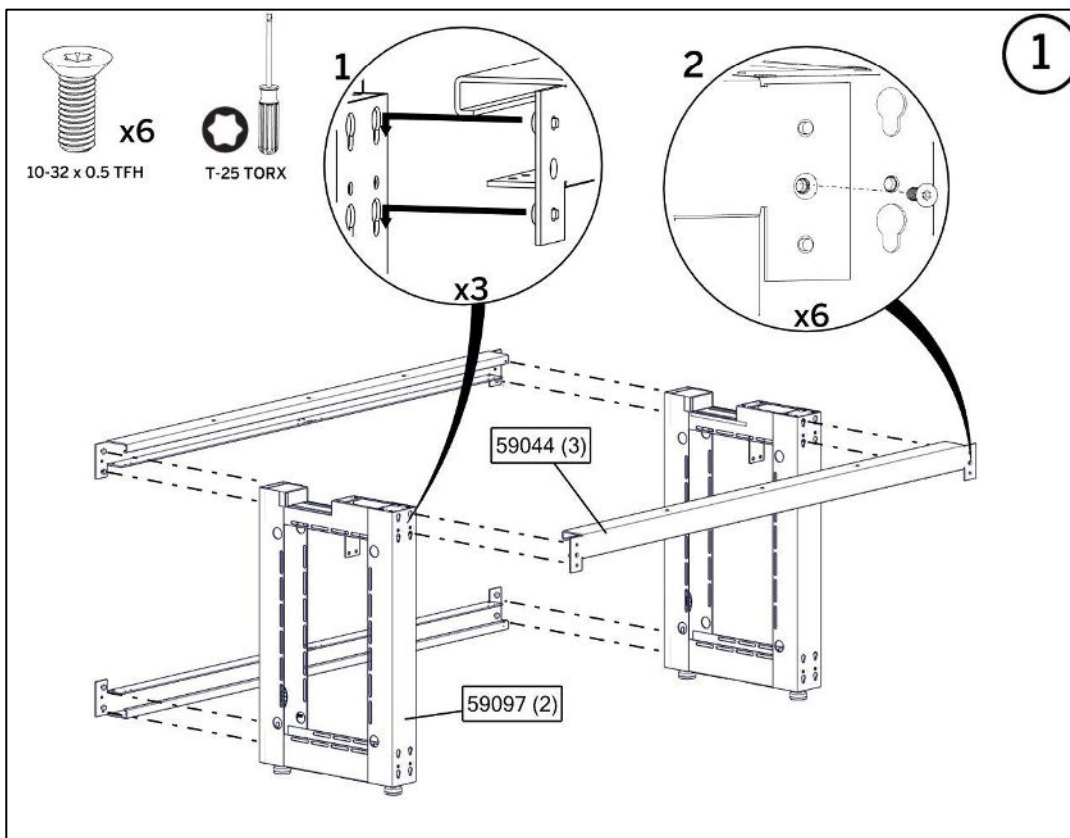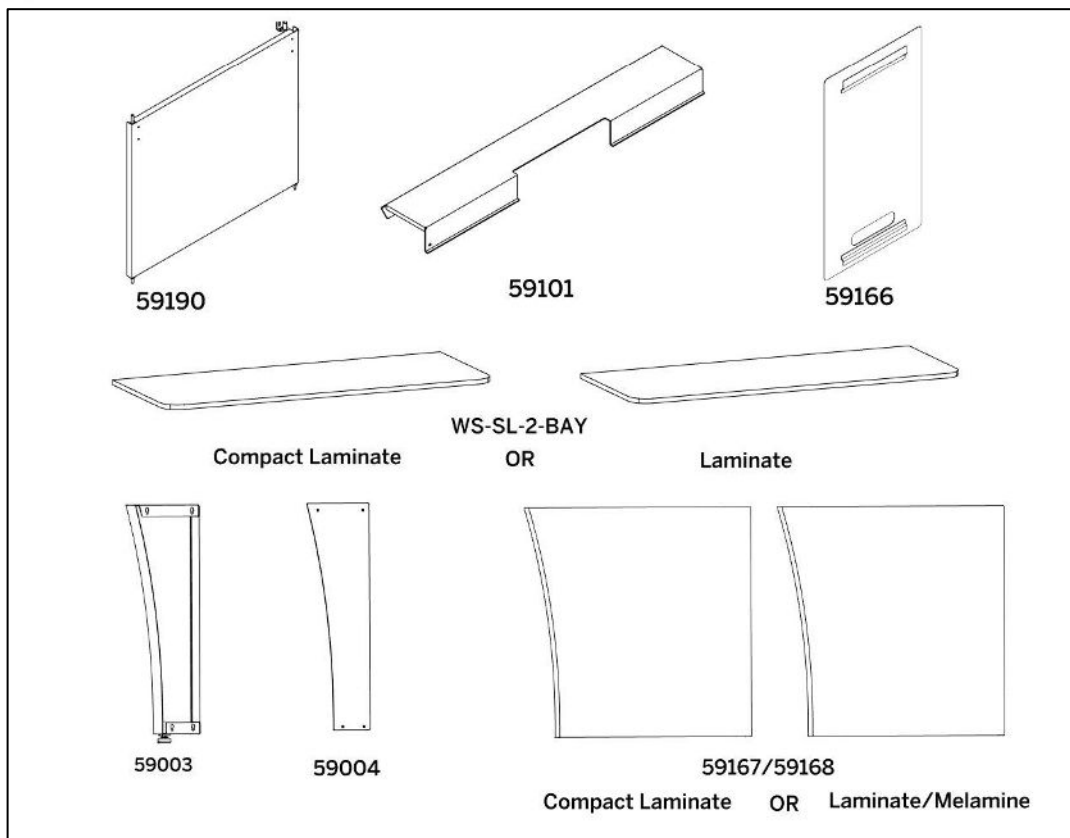

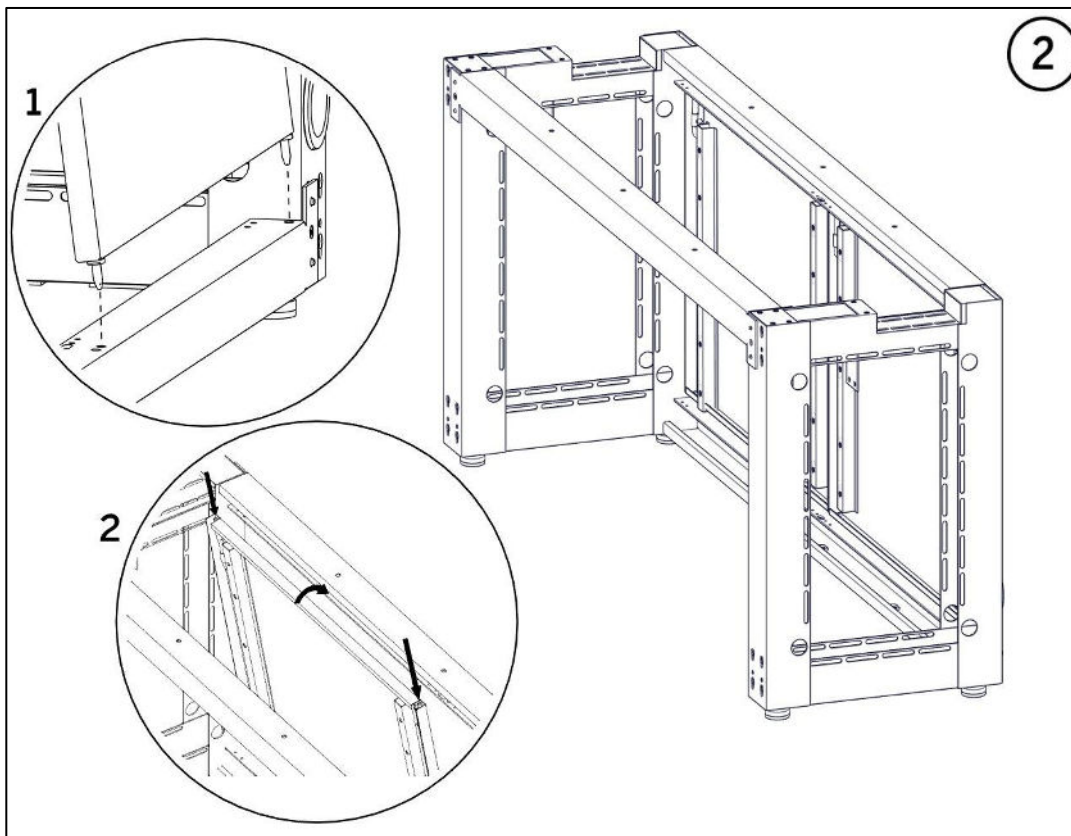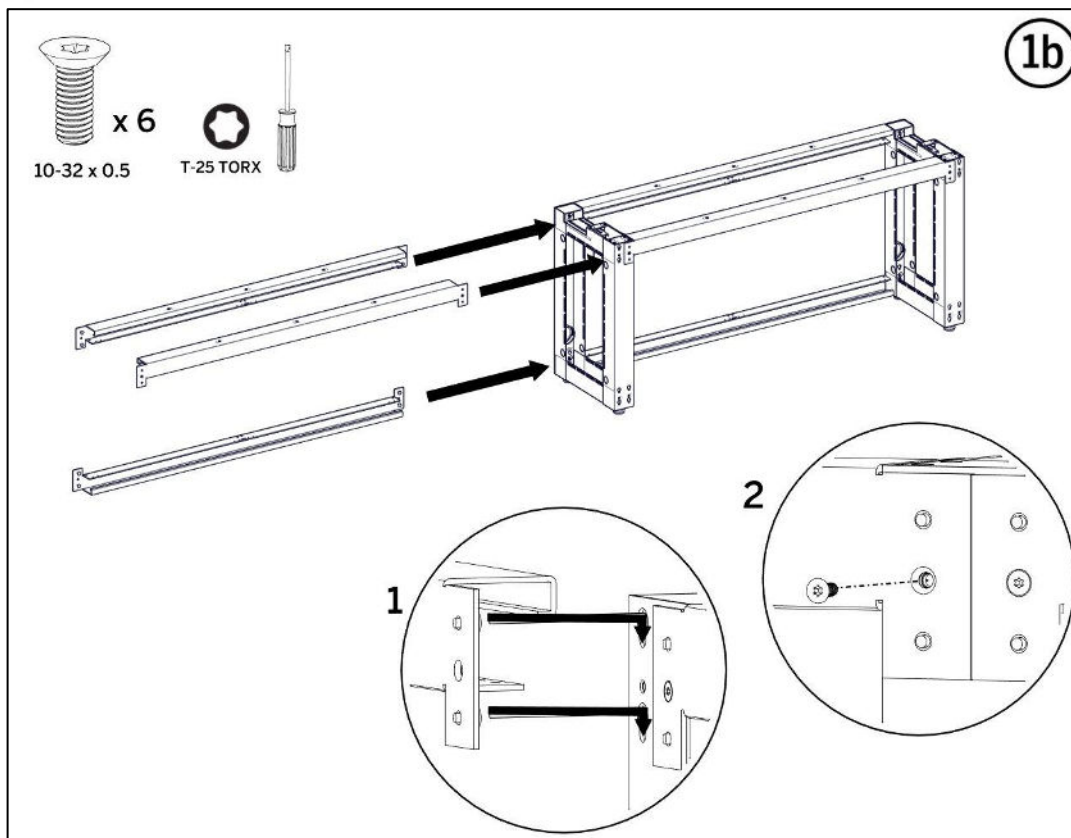

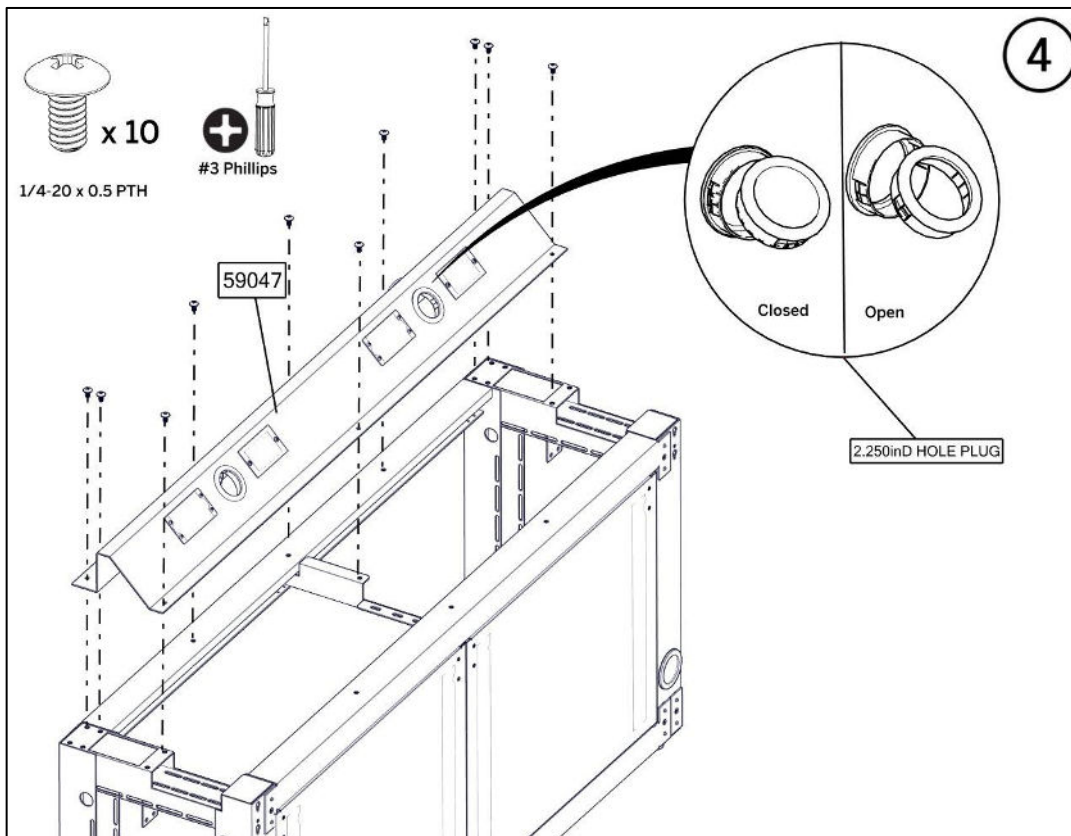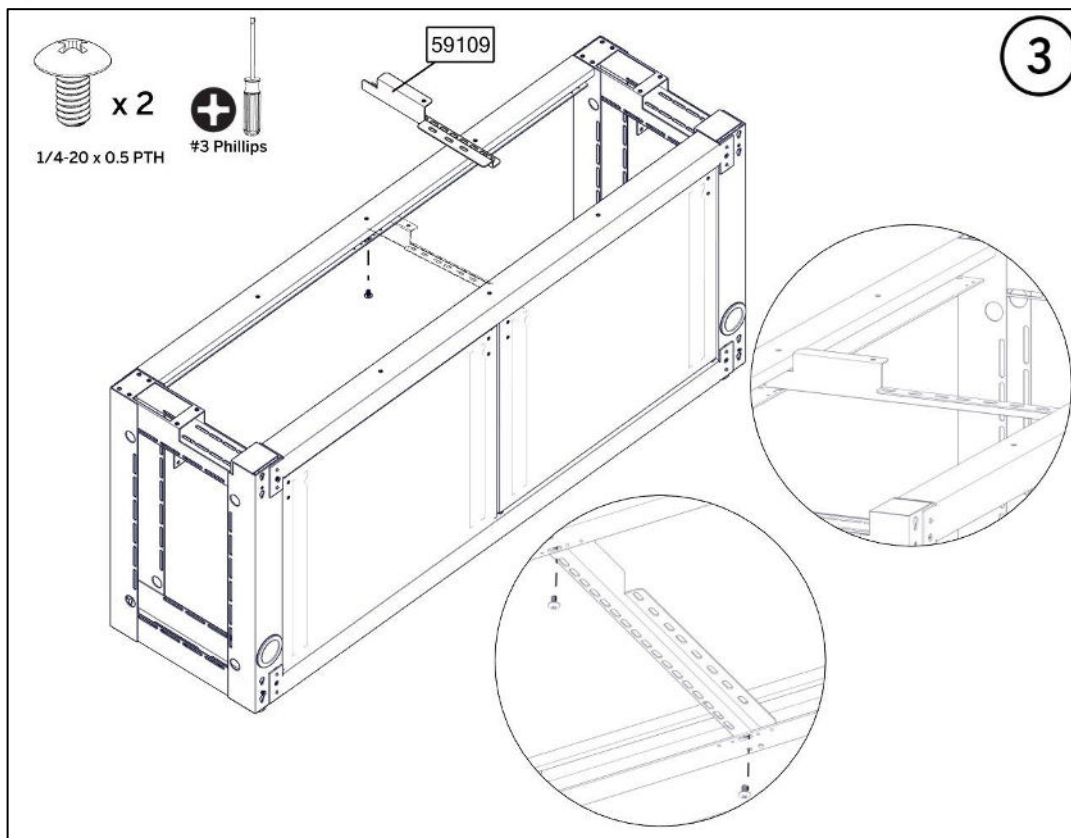

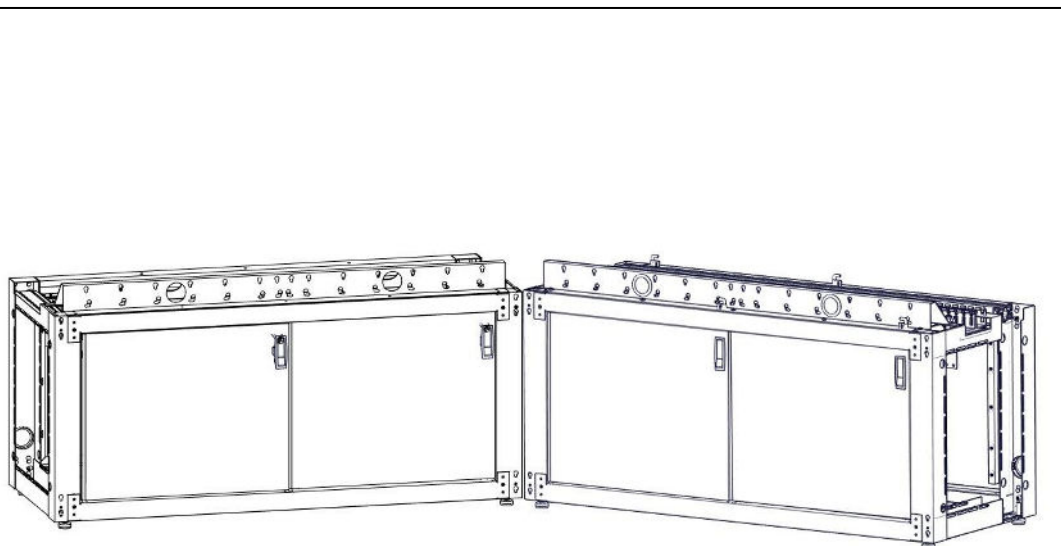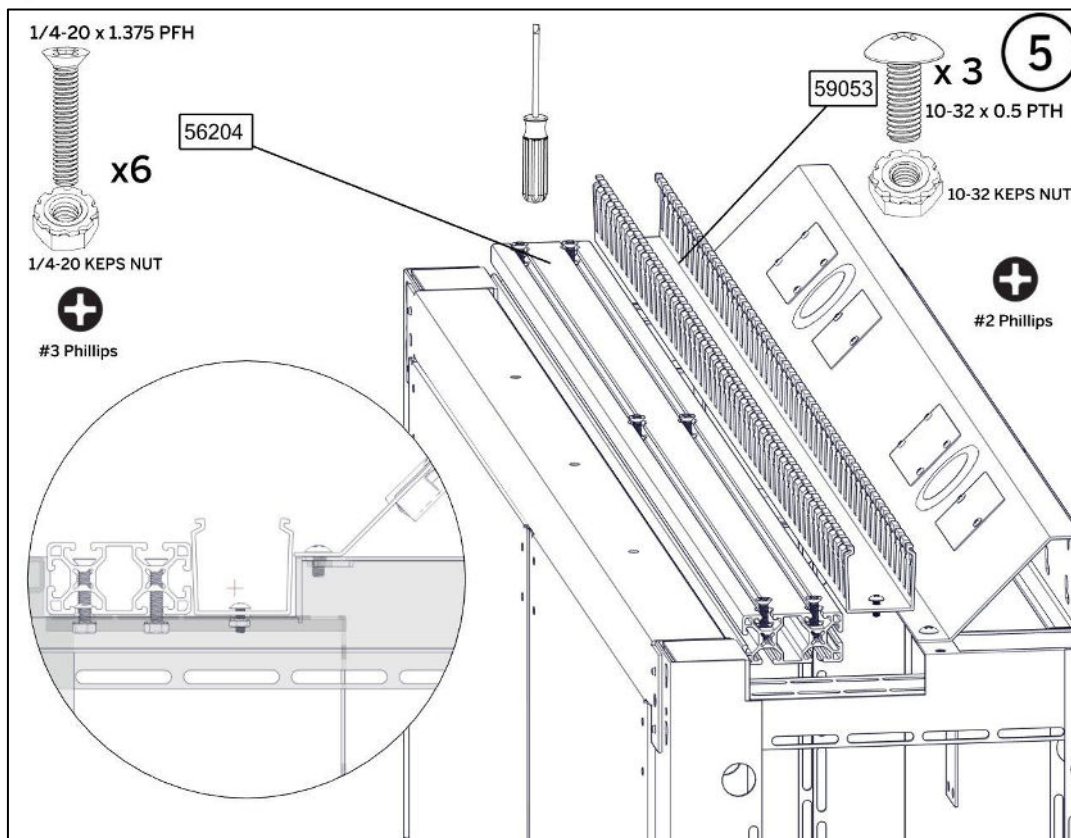

***If additional consoles will be added, repeat steps 1 through 7 until all consoles are attached and ready for step 8.**



Assembly Instructions

